

- 1 To turn UV Light "ON" push the power switch to the "ON" for position (LED light turns red).
- 2 Select the desired setting for the Timer Switch has there separate toggle settings. Select Symbol "—" for 2 Mins. Select Symbol "=" 3 min., or select "O" (the middle position) for "ALWAYS ON".
- 3 After the timer setting has been selected, push the Activation Button to activate the UV Light. Depending on the timer setting selected, the UV light will continue to function for 2 min. (Green LED) and then turns off automatically or 3 min. (Yellow LED) and then turns off automatically, or will remain "ON" continuously (No LED) until the power switch is turned off.
- **4** To Reset lamp: Press "Power" switch to the "OFF" position, wait 20 seconds, press "Power" switch to "ON".

UV LAMP WARNING: Do not cover or block the two air vents on top of this gel lamp. These vents must be clear at all times to prevent damage, overheating or fire. Warranty will be voided if vents have been covered/blocked.

Lamour UV lamp Light bulb installation note:

To Install the UV bulbs, each bulb must be tilted downward (Approximately 35 degrees) and then pushed into the light socket, after the bulb clicks into the socket, it will adjust to the proper position in the lamp.

UV GEL LIGHT SAFETY WARNING

Thank you for purchasing our 48 Watt UV Gel Light. Please read the safety instructions carefully before using this product.

- The electric power system is label on the box. Please pay attention to the voltage and frequency.
- Never look directly into the UV lights when the machine is ON.
- Light bulbs are HOT when the machine is ON. Please turn off the machine and wait until all the light bulbs cool down, then change the light bulbs.
- · Operate this machine under a clean and ventilated environment.
- · Do not let the plastic bag cover anyone's head.
- Do not use any corrosive sanitizer, solvent, thinner, or scrubber to clean.
- Remember to turn off the machine after use. If the machine will not be used for a long time, unplug the machine.
- This machine is not waterproof. Therefore, do not use it outdoor, under the rain, or in the bathroom etc.
- Do not unplug the machine with wet hands.
- · Hold the plug and then unplug the machine. Do not pull the wire.
- · Do not stack any thing on the machine.
- Do not touch the interior parts except when changing the light bulbs.
- Do not try to disassemble the machine. This will void the warranty.
- Do not try to repair the machine, please contact the distributors for service.

CERTIFICATE OF WARRANTY

Lamour MAXIMUS are guaranteed to be free of defects in materials, workmanship, and manufacture for one (I) year from date of purchase. Light tubes are guaranteed to be free from defects in manufacture and materials for ninety (90) days from date of purchase. If equipment failure or malfunctions occur during the warranty period, Lamour shall examine the inoperative equipment and have the option of repairing or replacing any part(s)which in the judgment of Lamour was originally defective or become so under conditions of normal usage and service.

No warranty shall apply to any part thereof that has been subject to accident, negligence, alteration, abuse or misuse by the end-user. Moreover, **Lamour** makes no warranties whatsoever with respect to parts not supplied by **Lamour** or that have been installed, used and/or serviced other than in strict compliance with the instructions appearing in the operational manual supplied to the end-user.

In no event shall **Lamour** be responsible to the end-user for any incidental or consequential damages, whether foreseeable or not, including, but not limited to property damages, inability to use equipment, lost business, lost profits, or inconvenience arising out of or connected with the use of instruments produced by **Lamour**. Nor is **Lamour** liable or responsible for any personal injuries occurring as a result of the use, installation and/or servicing of equipment.

RETAIN THIS CERTIFICATE OF WARRANTY